

# QYO™ WX RESPIRATOR

PAPR - P3

PRODUCT CERTIFICATION



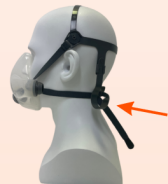





BSI Certified Product  
AS/NZS 1716:2012 Lic:BMP No 793811



## Quick Start Guide

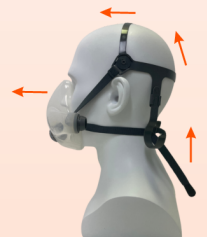
### A New Standard in Protecting Workers' Lungs

#### DONNING

Put on the mask assembly and tighten the strap	
Remove the Guard Link from the Main Unit	
Wake up the charged Main Unit and slide it down along the back of the head until it rests in the supporting hook	
Push-connect with the Main Unit with the mask with a Click	
Adjust the Supporting Hook to a comfortable height	
Place the strap buckle against the Neck Pad	

#### DOFFING

1. Take the strap buckle off the Neck Pad.
2. Twist the grip ring to disconnect the Main Unit from the mask.
3. Take off the mask
4. Reconnect the Guard Link to the Main Unit.



**Note:** The LED automatically enters sleep mode after 10 minutes of inactivity. To manually activate sleep mode, press the power button for 5 seconds.

#### CHARGING THE BATTERY

1. Plug the AC adaptor to the charging port



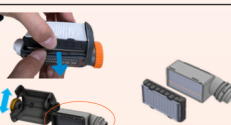

2. When all 3 Battery LEDs are on with no flashing, the battery is fully charged. Remove the plug and close the door.

## CHANGING FILTERS

### Changing Pre-Filter

Unlock then slide out the Filter Door	
Remove the old filter and fit a new one	
Slide in the door back and lock it.	

### Changing Main Filter

Twist then pull out the Filter Unit from the Power Unit	
Unlock then slide out the Filter Door	
Open the case and take out the filter assembly	
Fit a new filter assembly and close the case aligning with the groove	
Close the case with a click	
Slide in the door back and lock it	
Reconnect the Filter Unit to the Power Unit	

### FILTER BLOCKED ALARM



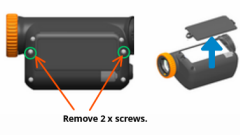
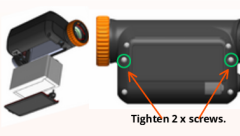
Filter LED on with the buzzer activated.

1. Press any key to remove the alarm.
2. Check and replace the filter

## WORKING WITH SHORT BEARD

1. Ensure a PortaCount Fit Factor of at least 1000
2. In case the blower stops while wearing due to a beard leak, press the Test button to prevent the stopping.

## BATTERY REPLACEMENT

Remove the battery cover.	
Take out the old battery and fit the new battery, then reinstall the battery cover.	

## MAINTENANCE

### Flow Capacity Check

1. Connect the Guard Link to the Main Unit then open the plug.
2. In standby mode, press the Test Button to run the flow test.
3. With a fully charged battery and clean filters, 3 battery LEDs should be lit right after the blower stops.
4. Close the plug once the test is completed.



### Visual Inspection

Visually check the following before each use:

1. Secure the Filter Unit connection with the Power Unit.
2. The Filter Door is correctly locked.
3. The bellows are not damaged or torn.

### Basic Cleaning

Use a damp cloth to wipe any dust from the Main Unit and the mask.

### Wet Cleaning

1. Wash the mask assembly with tap water. **wash the bellow section only.**
2. Connect the Guard Link then flush the Main Unit with tap water downward
3. Wipe with a dry cloth.

