


01 SPECTACLE FRAME SETUP


1 Take the spectacle frame to an optical store (optometrist) to have prescription lenses fitted.

2 After the lenses are fitted, insert the frame into the two holes on the mounting bracket, then lightly tighten the screw.


Frame-

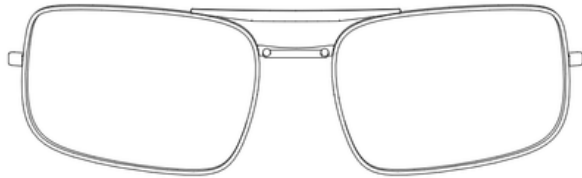

Mounting Bracket-

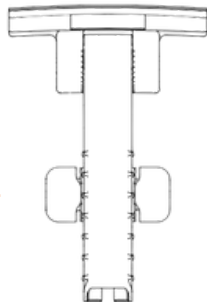


Screw-

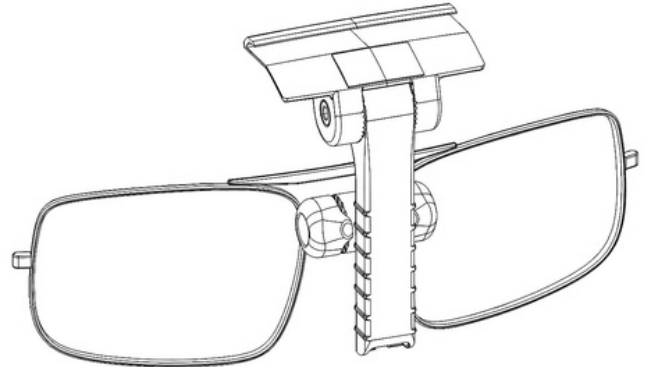


02 ALIGNMENT CARD

3 Peel off adhesive backing layer

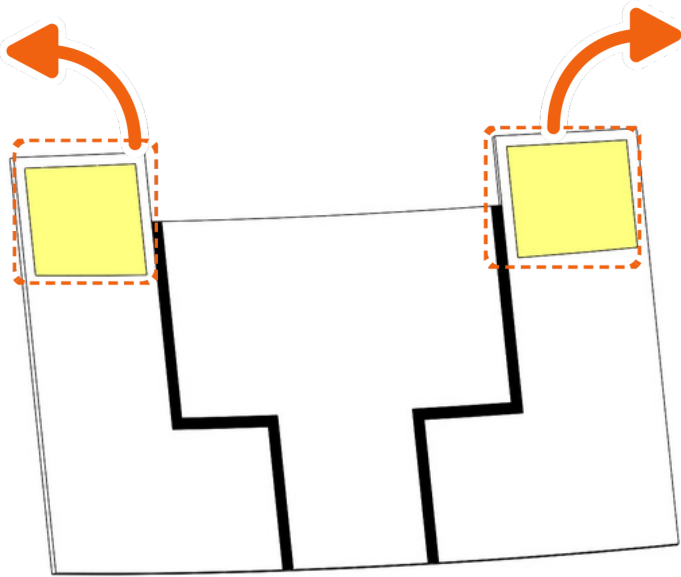


4 On the front surface of the visor, stick the positioning card at the very top in its correct alignment

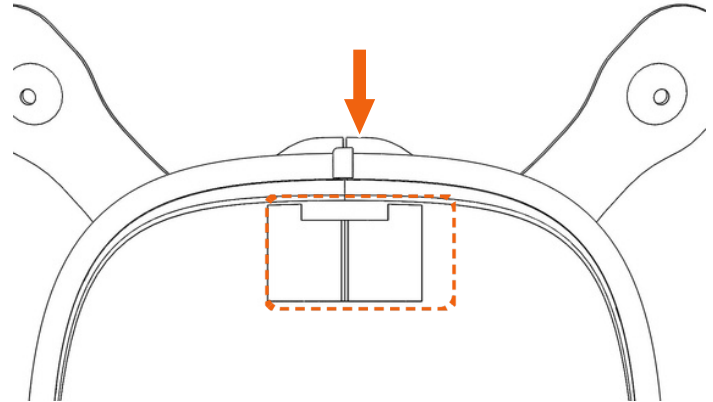


03 MASK DISASSEMBLY

5 Loosen bolts from top and bottom of the FFM frame assembly using M2.5 hex key provided.

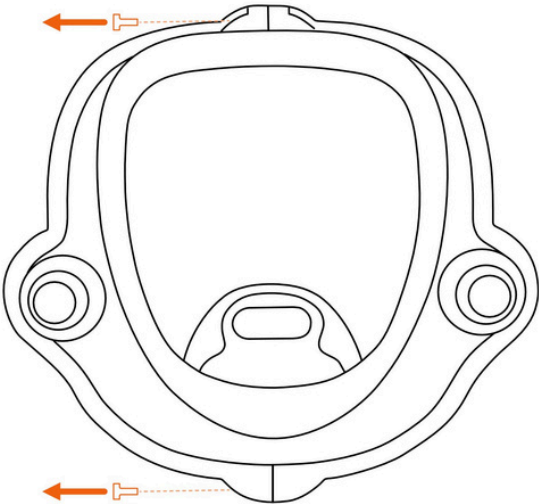


6 Remove frames from mask.

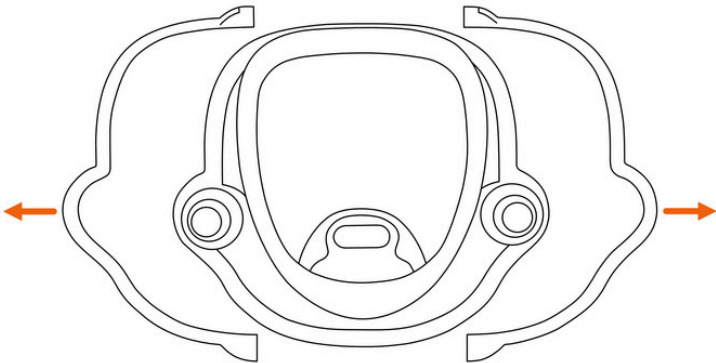

04 MASK DISASSEMBLY


- 7

Remove face cushion assembly from visor

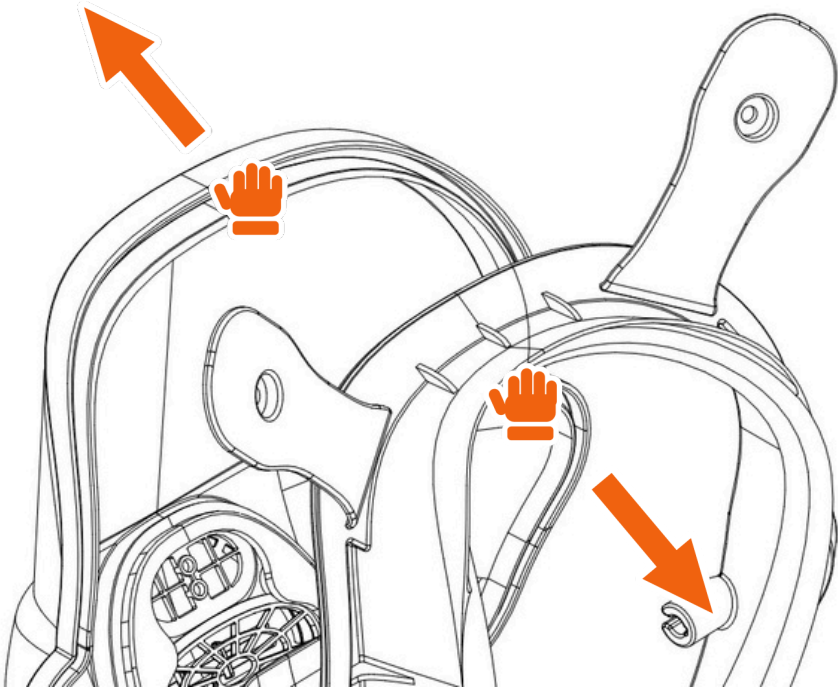


05 INSTALLATION

8 Peel off adhesive backing layer

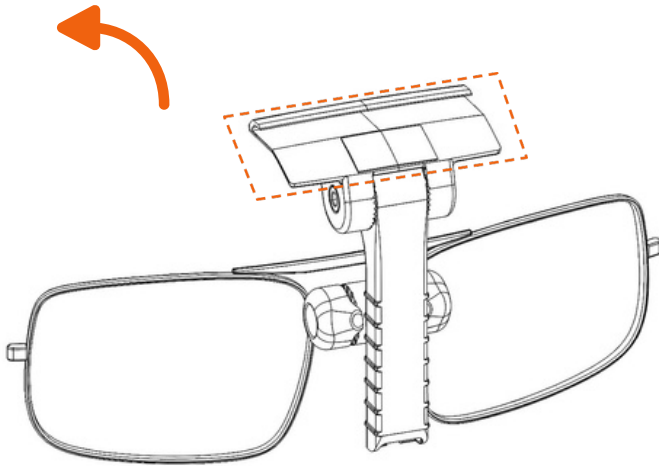


9 With the aid of positioning card, align spectacle kit in correct position and attach onto visor.

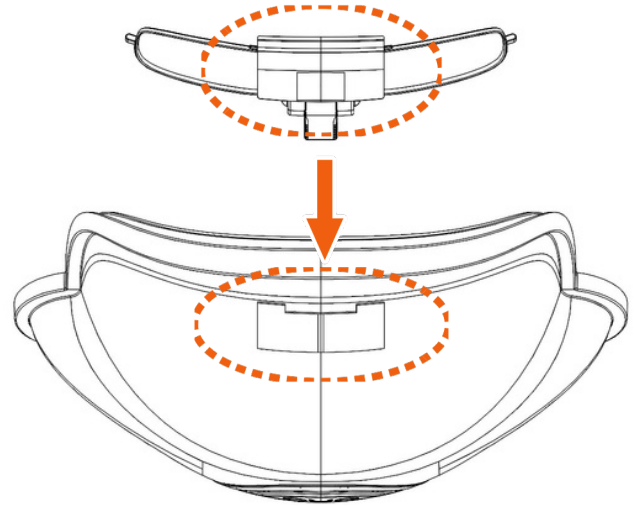

06 MASK REASSEMBLY

10

Reattach face cushion to visor, ensuring face cushion tongue is fully seated in visor groove.

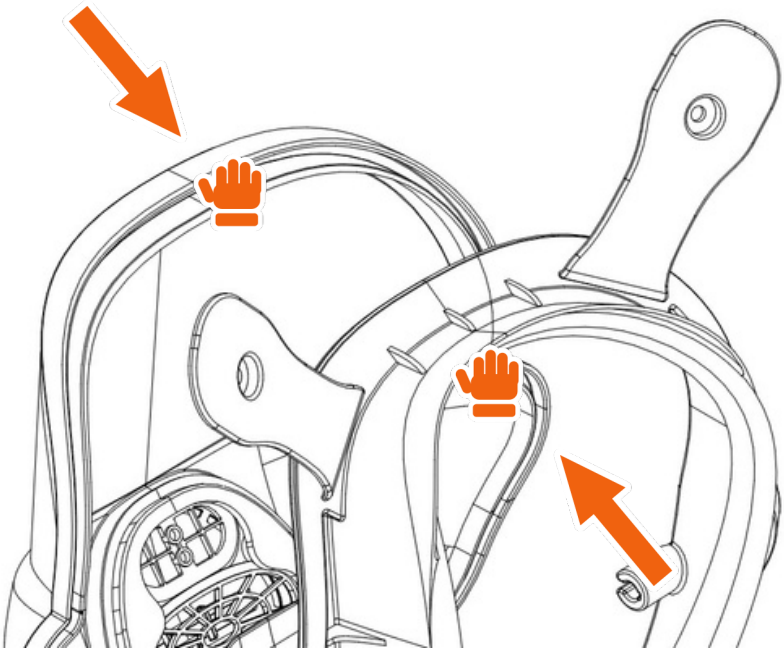

07 MASK REASSEMBLY

11 Reinstall left and right frames of FFM and hand fasten top and bottom bolts.

